

# SCHEMA DI MONTAGGIO/assembling scheme


PANNELLI FONOASSORBENTI





sound-proofing panels



ART.071-072-073-074-075-076

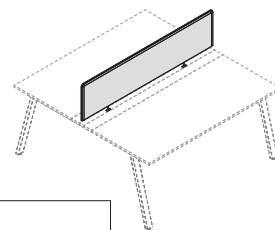

CODICE  
code 777 700 844  
DISEGNO  
drawing SM 52055  
DATA  
date 16-07-2018  
PAGINA  
page 1/2



CODE	COLOUR	CODE	Ø x L	COLOUR	CODE	COLOUR	CODE	COLOUR
505182201	FERRO iron	506223509	6MA x 20	ZINCATO 6MA x 3/4" - zinc plated	407004719	ARGENTO silver	423136119	ARGENTO silver
	A x 1		B x 4		C x 2		D x 4	

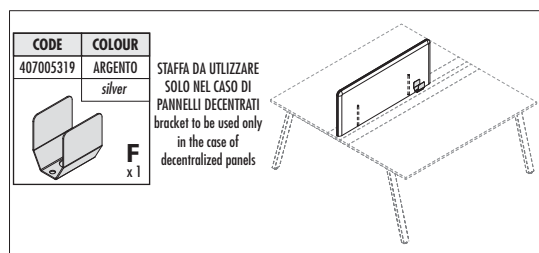

## FASI / phases 1-2-3-4

- 1 ASSEMBLARE I SUPPORTI CON LE VITI E INSERIRE NELLA CAVA DELLA BARRA CENTRALE  
assemble the supports with screws and insert into the groove of the central bar
- 2 INSERIRE IL PANNELLO IN CORRISPONDENZA DEI SUPPORTI  
insert the panel in corresponding the supports
- 3 SOLLEVARE LEGGERMENTE IL PANNELLO E SERRARE LE VITI PER BLOCCARE I SUPPORTI SULLA BARRA  
lift the panel slightly and tighten the screws to block the supports on the bar
- 4 INSERIRE A PRESSIONE LA COPERTURA, NELLA CAVA DELLA BARRA  
insert the cover by pressing into the groove of the central bar

## USO PANNELLI FRONTALI use front panels

IL MONTAGGIO DEI PANNELLI FONOASSORBENTI  
AVVIENE ESCLUSIVAMENTE:


- 1- SOPRA LE BARRE CENTRALI
- 2- SU TAVOLO TEAM CON CAVALLETTI

VEDI GLI ESEMPI ILLUSTRATI

the soundproofing panels are exclusively assembled:

- 1- on the central bars
- 2- on team table with gantries

please, you see the illustrated examples

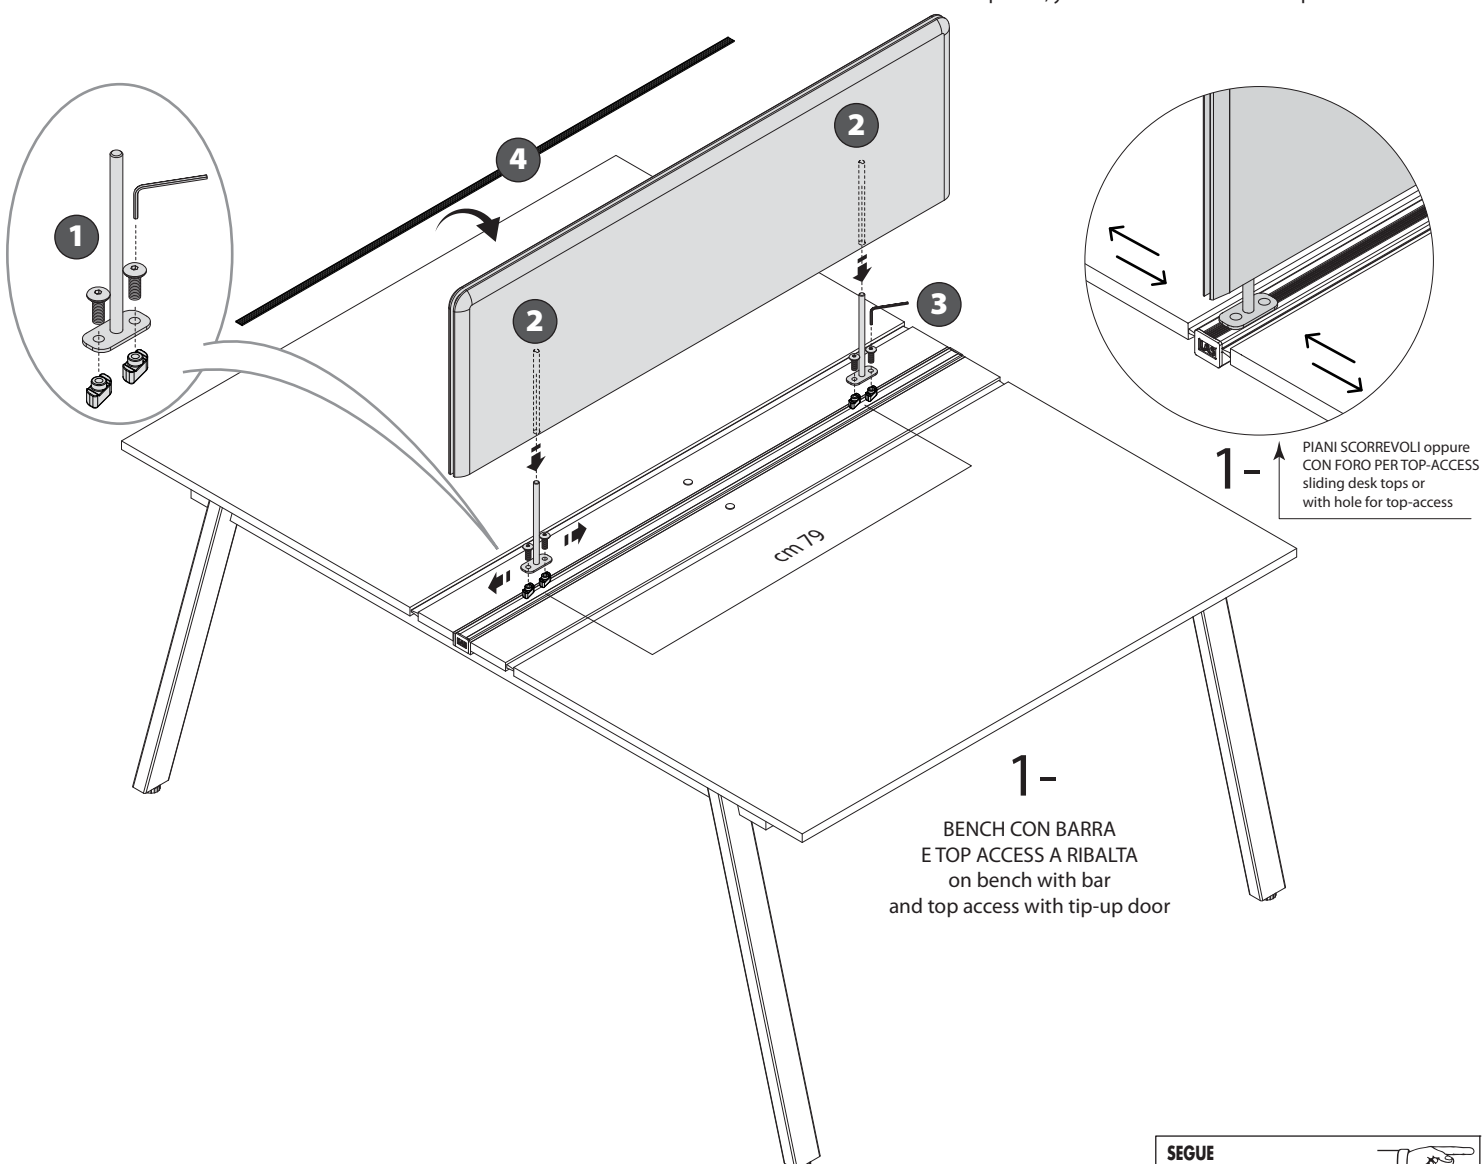


SEGUE  
assembling in the following page



2- MONTAGGIO PANNELLI SU TAVOLO TEAM CON CAVALLETTI



2- ASSEMBLY OF PANELS ON TEAM TABLE WITH GANTRIES

CODE	COLOUR
407004719	ARGENTO
	silver



**C**  
x 2

CODE	Ø x L	COLOUR
506223000	6MA x 15	ZINCATO
	6MA x 9/16" - zinc plated	




**G**  
x 4

**TB/X**

FASI / phases 1-2-3

- 1** SFONDARE LE DUE PREFORATURE SOTTO AL PIANO (punta da 10,5mm)  
break the two pre-drilled holes under the floor (drill 10,5mm)
- 2** INSERIRE I SUPPORTI E FISSARE DA SOTTO CON LE VITI  
insert the supports and fix them with screws from underneath the top
- 3** INSERIRE IL PANNELLO IN CORRISPONDENZA DEI SUPPORTI  
insert the panel in corresponding the supports

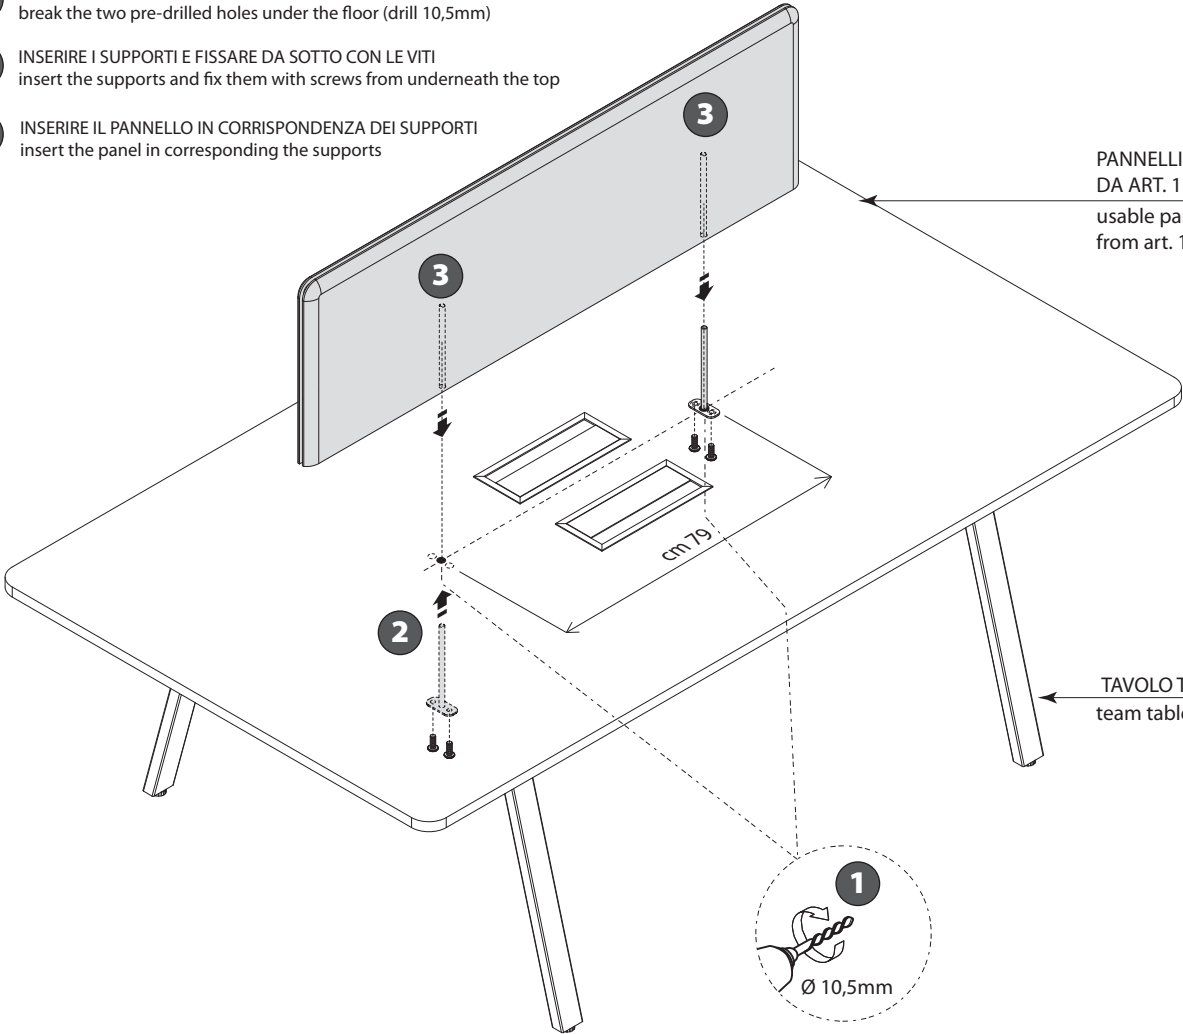

PANNELLI UTILIZZABILI:  
DA ART. 173072 A ART. 173075  
usable panels:  
from art. 173072 to art. 173075


TAVOLO TEAM ART.173298  
team table art.173298

SCHEMA DI MONTAGGIO/assembling scheme

PANNELLI FONOASSORBENTI CENTRALI O LATERALI  
central or lateral sound-proofing panels

ART.077-078

CODE	COLOUR
423075019	ARGENTO
	silver



**L**  
x 1

